Simplicity

LIGHT KIT
for
LANDLORD
SOVEREIGN
BROADMOOR
YEOMAN

MFR. NO. 618

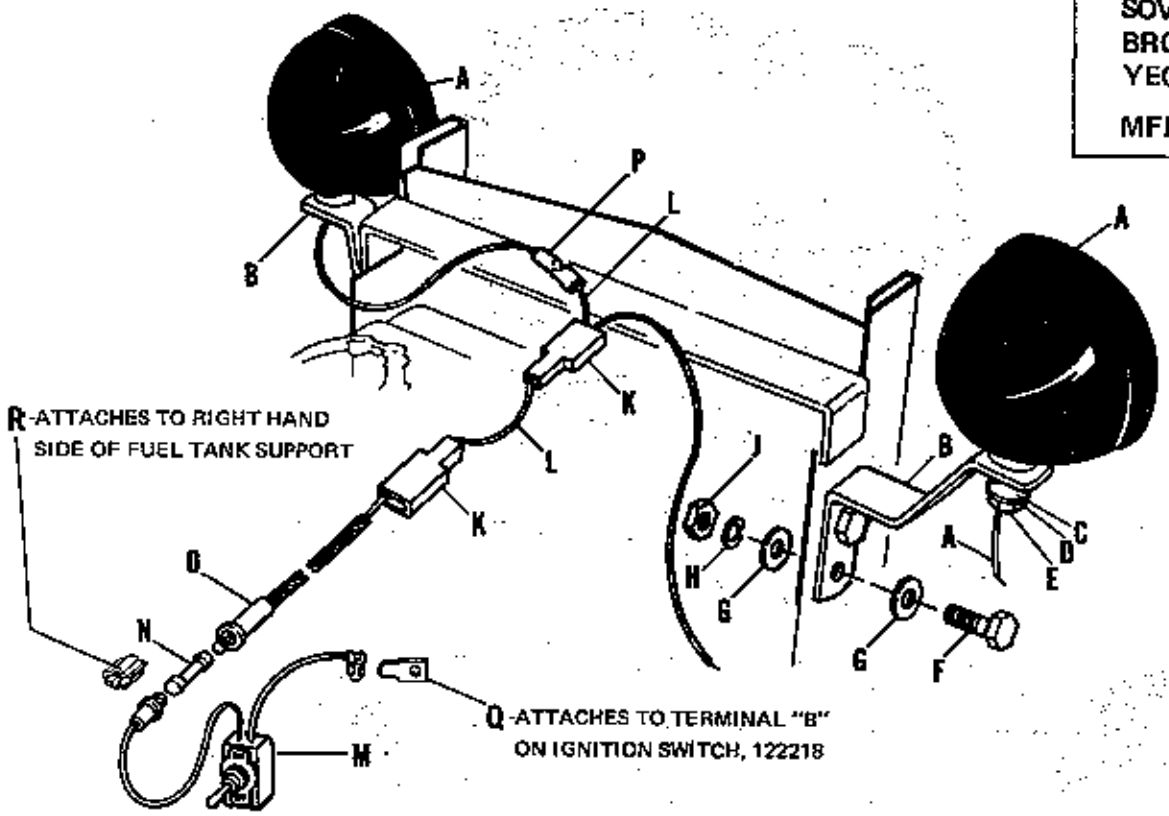

1. Remove Hood and Battery.

2. Remove white plastic plug button from 1/2" hole on the dash board and install toggle switch. (Ref. Let. "M").

3. Before beginning to install the light kit, study the above illustration and identify all of the parts. Attach the light support brackets (2) 122194 with 705018 capscrews, 720001 lockwashers, 719002 plain washers and 717001 hex nuts. The bottom hole of the light support bracket 122194 will have 2 plain washers 719002, one under the head of the capscrew and the other between the lockwasher and the grill support.

4. Remove all paint from the immediate area around the two lamp mounting holes on the light support and mount the lamps to the support with a spacer between the lamp support and nut. Fasten securely with a 1/2" - 13 hex nut and lockwasher.

5. Attach the terminals of the lamp wires to the connector. Attach the extension wire (122185) between the two connectors. Remove the wire clamp near the front left corner of the gas tank. Install the wire (122212) from the connector to the fuse through the clamp and refasten. Then install toggle switch wire to other end of fuse. Attach other toggle switch wire to ignition switch terminal.

Ref. Let.	Part No.	Description
A	122175	Lamp Assembly
B	122194	Bracket
C	122053	Spacer
D	720004	Lock Washer, 1/2"
E	717006	Full Hex. Nut, 1/2" - 13
F	705018	Hex. Capscrew, 5/16" - 18 x 1-1/2"
G	719002	Plain Washer, 5/16"
H	720001	Lock Washer, 5/16"
J	717001	Full Hex. Nut, 5/16" - 18
K	122182	Insulated Connector
L	122185	Extension Wire
M	122211	Toggle Switch (with hardware)
N	122172	Fuse 20 Amp.
O	122212	Wire Connector
P	122157	Connector
Q	170202	Terminal
R	122183	Fuse Clip

1324

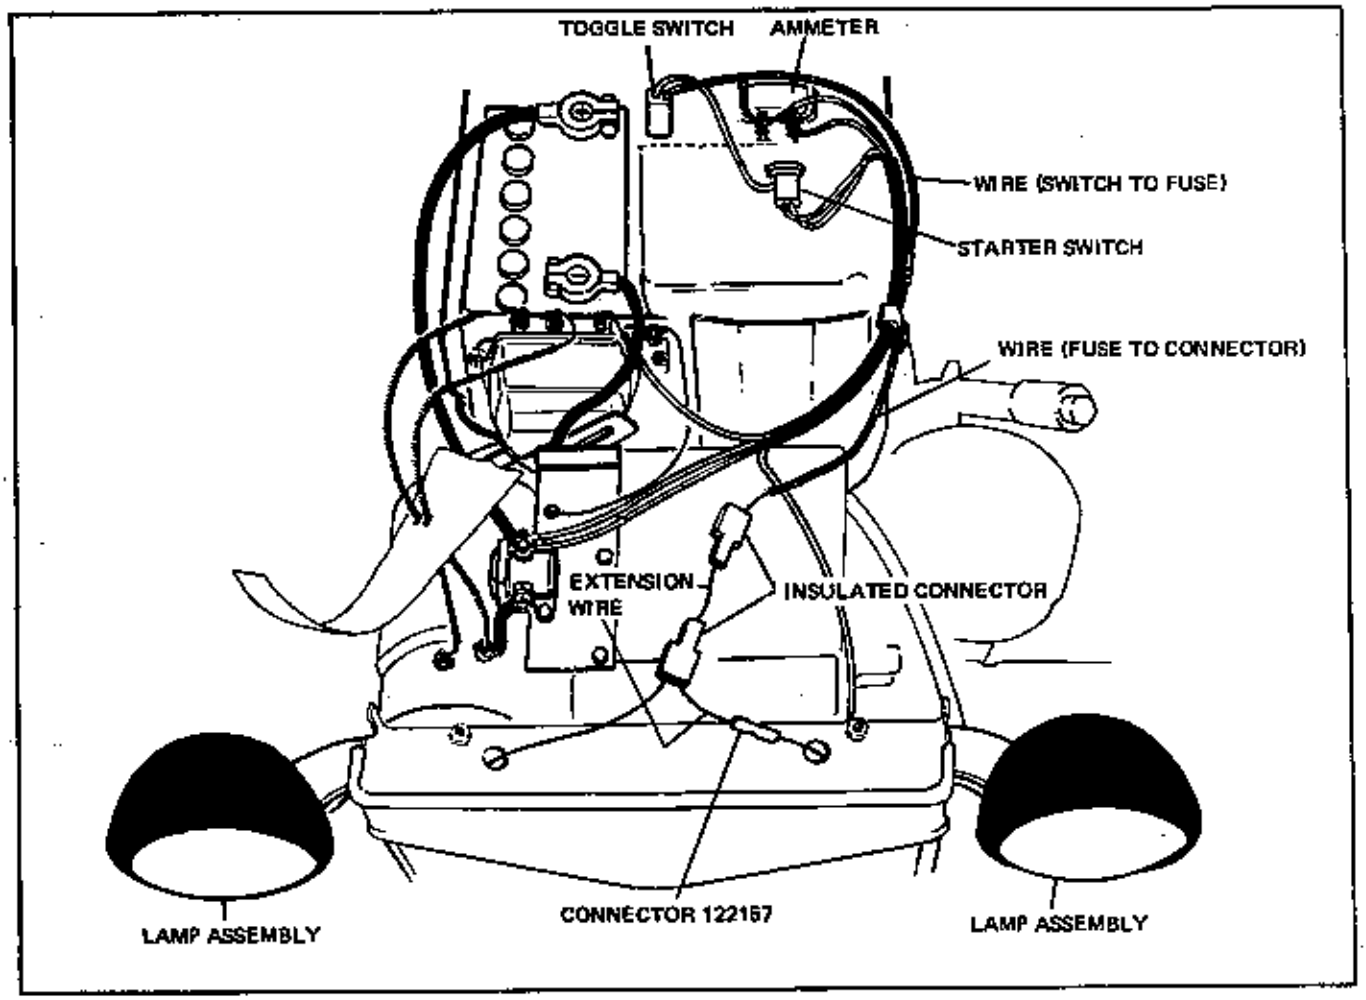
TOGGLE SWITCH
AMMETER
WIRE (SWITCH TO FUSE)
STARTER SWITCH
WIRE (FUSE TO CONNECTOR)
EXTENSION WIRE
INSULATED CONNECTOR
CONNECTOR 122157
LAMP ASSEMBLY
LAMP ASSEMBLY

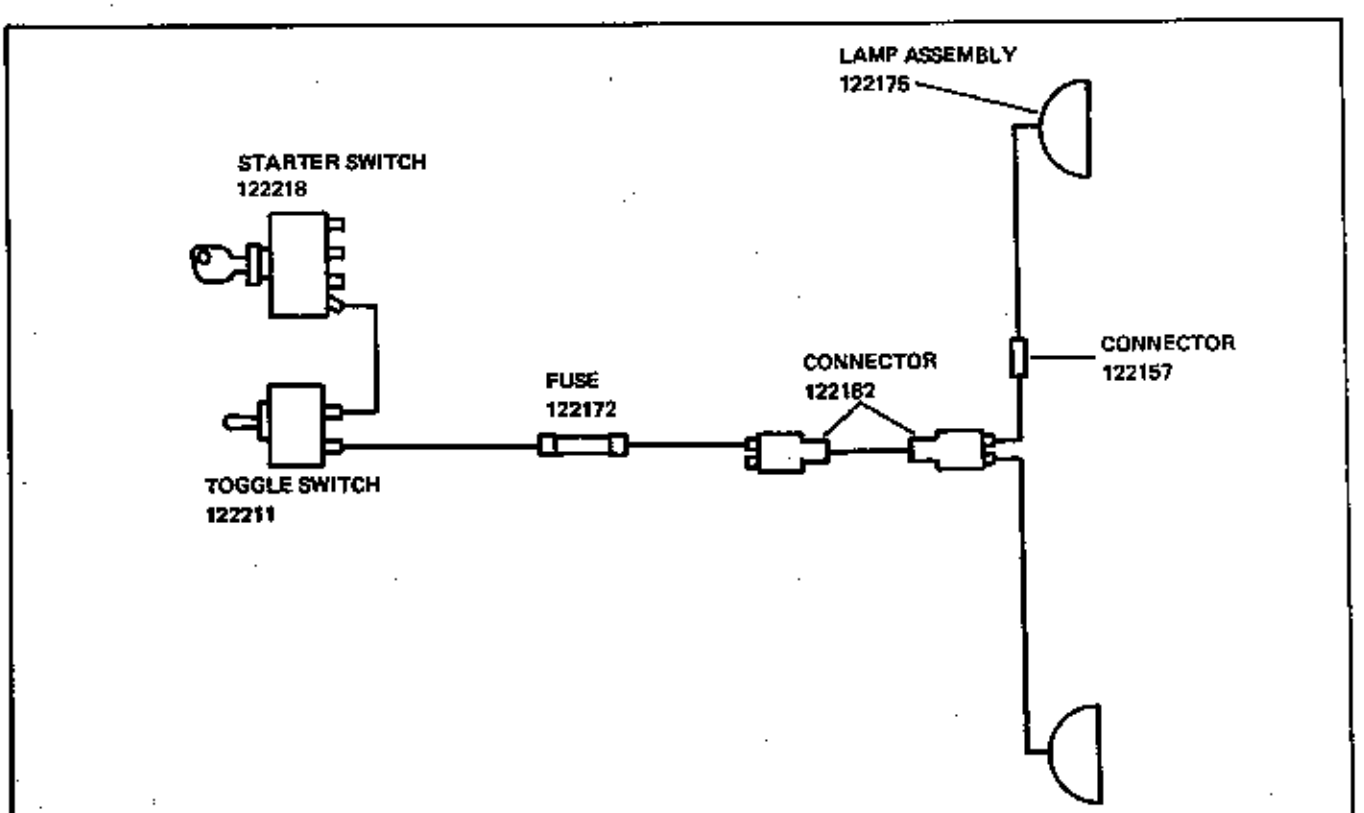
LAMP ASSEMBLY
122175
STARTER SWITCH
122218
CONNECTOR
122157
CONNECTOR
122162
FUSE
122172
TOGGLE SWITCH
122211